


MERCEDES-BENZ SPRINTER

REAR DOOR LOWER STORAGE PANELS

CAUTION  Please read all steps before you begin. Installation of this product requires drilling through the first layer of sheet metal on the inside of your van doors. Take caution not to drill farther than about 1/2" or you risk drilling through the outside of the door. VanEssential is not responsible for any mistakes made.

What's Included:

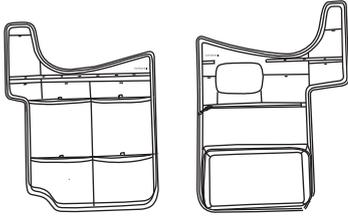

2X Rear Door Storage Panels



Sheet Metal Screws



T25 Screwdriver Bit

You Will Need:



Power Drill




3/32" Steel Drill Bit
with depth stop at 1/2"




A Friend

Right Side Panel


1. Have a friend help you hold up the panel, placing their hands on the left and right side of the cover. Use the hole in the panel as a placement guide by aligning it over the door handle. Align the "horn" of the panel with the narrow metal space near the edge of the van door.

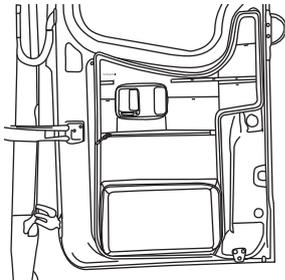


3. Drive a screw into the hole, securing the panel in place.

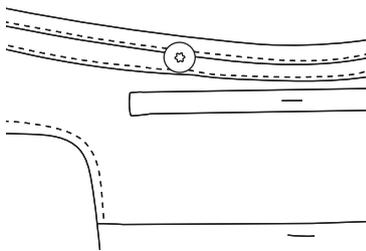


5. Add additional screws around the panel edge between the outer seams as needed for a secure fit. Steo back and admire your work!

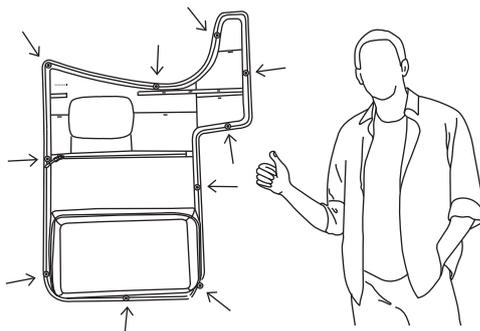

2. Starting in the top center, identify a spot between the two outer seams and pre-drill a hole through the panel (and the plastic panel if it's in your van) and into the van door.

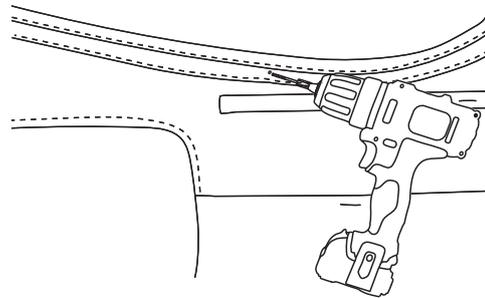


4. Repeat this process on the bottom of the panel in the center. Then repeat this process on the left center and right side center.

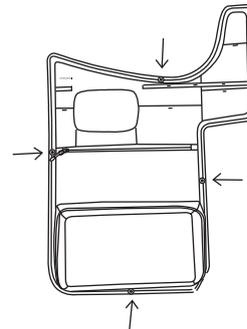


MERCEDES-BENZ SPRINTER REAR DOOR LOWER STORAGE PANELS

Left Side Panel


1. Have a friend help you hold up and align the panel to the window frame, placing their hands on the left and right side of the cover. Use the "horn" of the panel as a placement guide by aligning it with the narrow metal space near the edge of the van door.

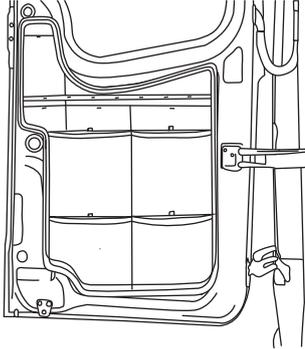


2. Starting in the top center, identify a spot between the two outer seams and pre-drill a hole through the panel (and the plastic if it's in your van) and into the van door.

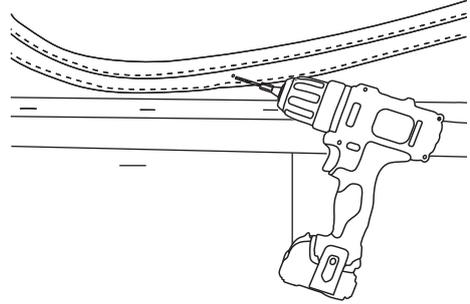

3. Drive a screw into the hole, securing the panel in place.

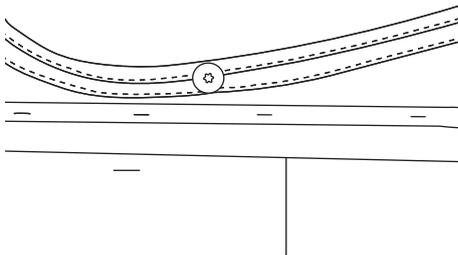

4. Repeat this process on the bottom of the panel in the center. Then repeat this process on the left center and right side center.

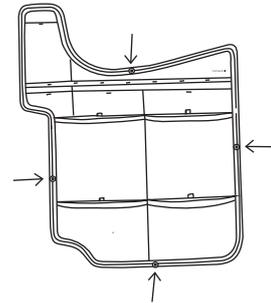

5. Add additional screws around the panel edge between the outer seams as needed for a secure fit. Steo back and admire your work!

