

SLIDING DOOR BUG SCREEN


MERCEDES-BENZ SPRINTER




CAUTION

If you're not comfortable installing this product yourself, we recommend contacting a local van builder for assistance.


What's Included:

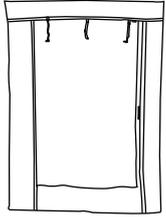


Sliding Door Bug Screen

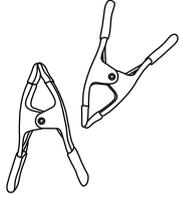


2x Spring Clamps

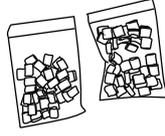

50x Small and
50x Large Metal Clips

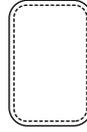

Spare
Velcro Patch

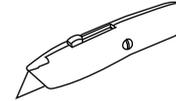

A Sharp Blade




A Step Stool


You Will Need:

Estimated Install Time: 60-90 Minutes


1. Before starting, open your sliding door. Check if your van has a circular latch located on the interior right side of the sliding door opening (most Sprinter vans 2025 and newer). If your van has this feature, please follow the additional instructions marked with ***Extra Latch Instructions**.

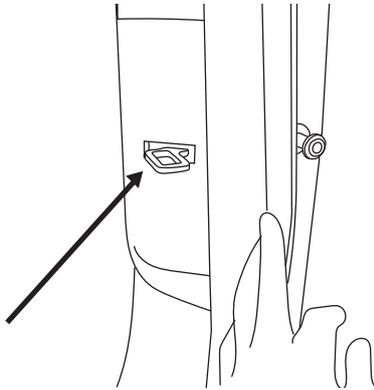


2. With the sliding door still open, hold the bug screen up to the van. Check that the VanEssential logo faces out towards you. Clamp the bug screen to the top corners of the sliding door.

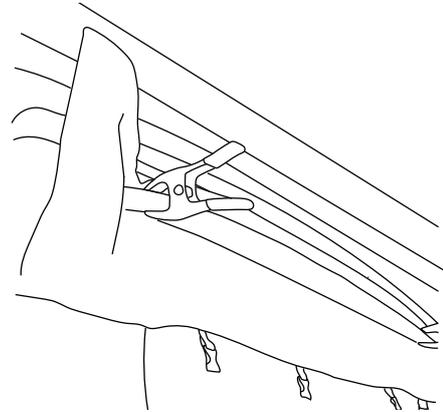

3. Starting at the top middle of the door frame, slowly pull the weather strip away in a small 12" section. If there is dirt or grease underneath the weather strip, clean it off before proceeding.

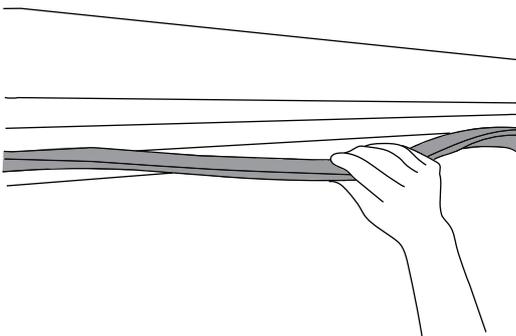


4. Feed the bug screen fabric underneath the weather strip until the bottom of the bug screen is hanging just below the floor of your van. Reclamp as needed.

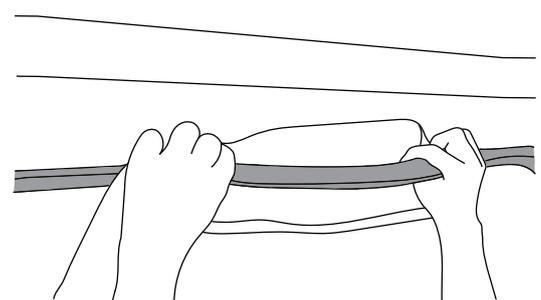


***Extra Latch Instructions:** Double check that the latch is centered in the middle of the velcro patch on the right side of the bug screen.

SLIDING DOOR BUG SCREEN


5. Secure the bug screen to the door by installing the metal clips onto the frame. There are two sizes of clips to accommodate for different widths around the door frame. Use the size in each location that fits best and has the most secure hold. Wrap your hand around the weather strip and squeeze it to tighten it up before reinstalling over the fabric and clip.

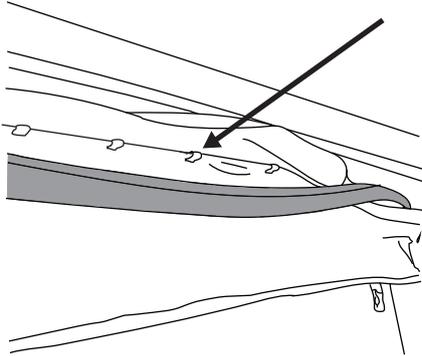


6. Working from the top to the sides, continue this process in small sections. Place metal clips approximately 6" apart, or as frequently as needed for a secure fit. **Do not install the bug screen too tightly from left to right. If the bug screen is too taut, the magnetic door will not function properly.**

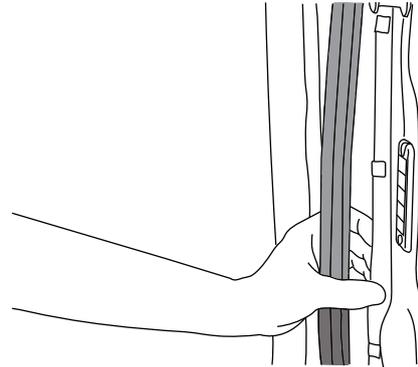


7. Once your bug screen is installed, check that everything is operational and that the magnetic door functions properly. If needed, you may remove the weatherstrip and clips and adjust as needed.

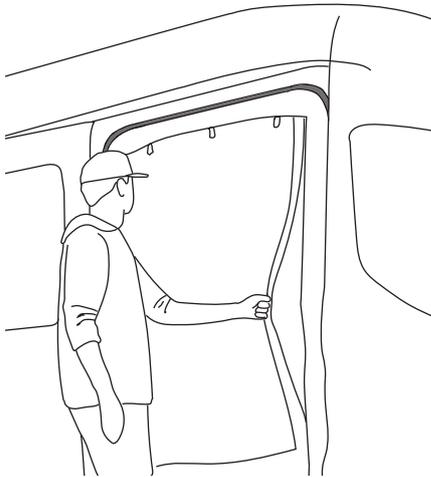

8. ***Extra Latch Instructions:** Remove the velcro patch from the right side of your bug screen. Away from your van, create a 1.5 inch wide cut at the same height as the door latch. Replace the patch and ensure the cut aligns correctly. Shut your sliding door and ensure the patch slides easily over the latch to allow for proper door closure. If needed, discard the first patch and repeat this step with the spare patch until a good fit is achieved.

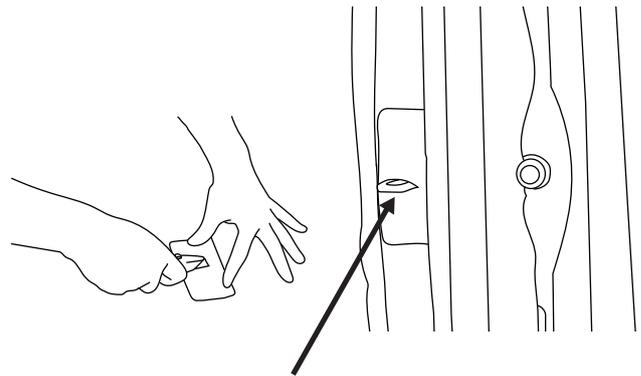

9. Remove excess fabric with a sharp blade for a finished look.

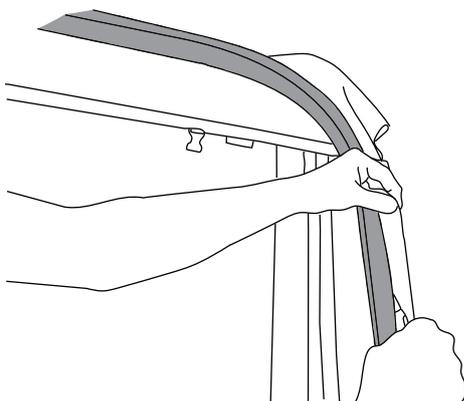

How to roll up your bug screen:

-With the bug screen unrolled and unzipped, hold the bottom corners of the bug screen in each hand.

-Fold the bottom corners in towards center to create a tapered shape.

-Roll the tapered bottom of the bug screen upward while maintaining a tight grip. Secure buckles at the top.

