


# RAM PROMASTER

## REAR DOOR UPPER STORAGE PANELS




Please read all steps before you begin. Installation of this product requires drilling through the first layer of sheet metal on the inside of your van doors. Take caution not to drill farther than about 3/8" or you risk drilling through the outside of the door. VanEssential is not responsible for any mistakes made.

### What's Included:



1X LEFT Rear Door Storage Panel



1X RIGHT Rear Door Storage Panel



T25 Screwdriver Bit



Sheet Metal Screws

### You Will Need:




Power Drill




3/32" Steel Drill Bit  
with depth stop at 3/8"


1. If applicable, remove all plastic stock trim so that your door has the metal frame exposed.

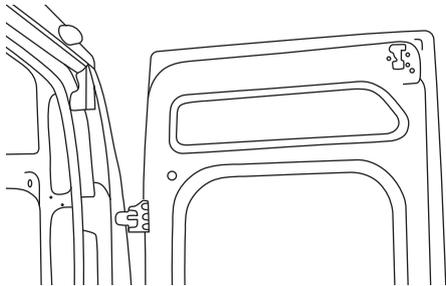


2. The panel is designed to be larger than the indentation located towards the top of the door. Hold up the panel and center it around the indent towards. You'll want to make sure it's out of the way of the rubber weather strip.

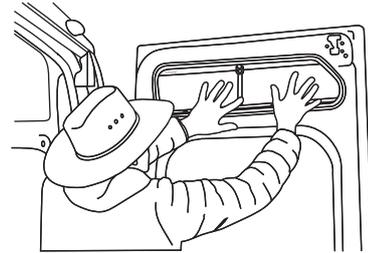


3. Starting in the upper left-hand corner, identify a spot between the two outer seams and carefully pre-drill a hole through the panel and into the van door.

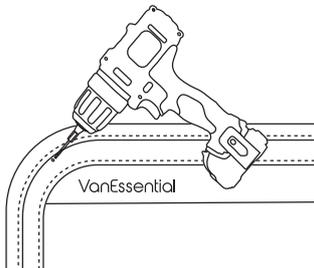

4. Drive a screw into the hole, securing the panel in place.

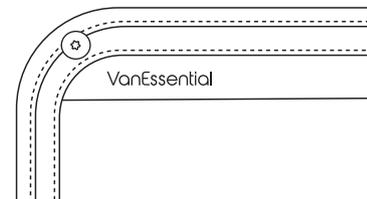

5. Repeat this process in each corner, and add additional screws around the panel edge between the outer seams as needed for a secure fit.

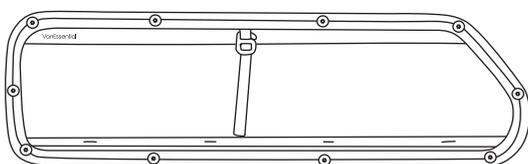

6. Repeat steps 1-5 for the second panel on the opposite door. You will likely have leftover screws. Step back and admire your work!

