


RAM PROMASTER

REAR DOOR LOWER STORAGE PANELS



Please read all steps before you begin. Installation of this product requires drilling through the first layer of sheet metal on the inside of your van doors. Take caution not to drill farther than about 3/8" or you risk drilling through the outside of the door. VanEssential is not responsible for any mistakes made.

What's Included:

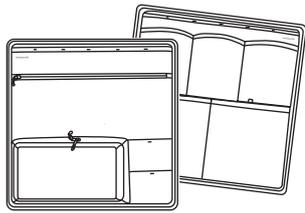


2X Rear Door Storage Panels




Sheet Metal Screws



T25 Screwdriver Bit

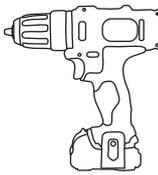

Power Drill



5/32" and 3/32" Steel Drill Bit with depth stop at 3/8"




A Friend


You Will Need:

NOTE: These panels are interchangeable and can be installed on either the left or right door.


1. If applicable, remove all plastic stock trim so that your door has the metal frame exposed.

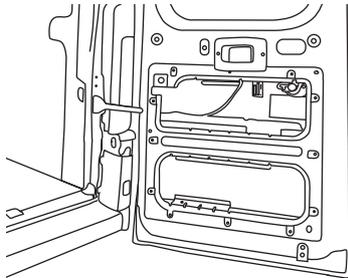


2. Have a friend help you hold up and align the panel to the lower door frame, placing their hands on the left and right side of the cover.

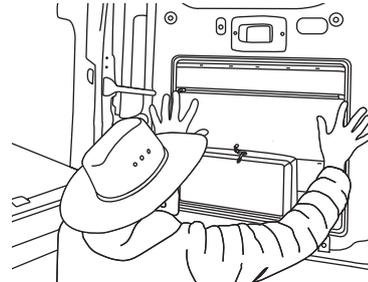


3. Start by using your 5/32" steel drill bit. On the edge closest to the door hinge, identify a spot between the two outer seams and pre-drill a hole through the panel and into the van door. Drive a screw into the hole, securing the panel in place.

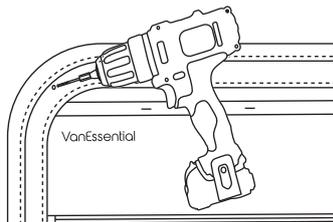

4. Repeat this process along the entire edge of the panel closest to the door hinge.

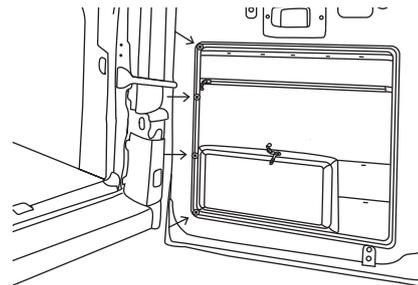

5. Switch to your 3/32" steel drill bit. Pre-drill holes between the two outer seams around the rest of the panel. Drive screws into the holes, securing the panel in place.

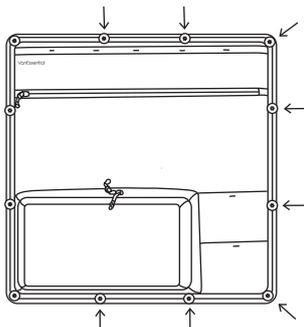

6. Repeat steps 1-5 for the second panel on the opposite door making sure to use the 5/32" drill bit on the edge closest to the door hinge. You will likely have leftover screws.

