


MERCEDES SPRINTER

HEADLINER SHELF COVER

What's Included:



Headliner Shelf Cover



Alcohol Wipe



Small Screws


You Will Need:



Power Drill




#1 Philips Head
Screwdriver Bit

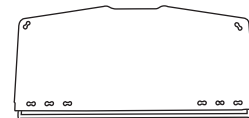


Headliner Shelf Installed in Van


1. Use the included alcohol wipe to wipe down the front top of the metal headliner shelf.

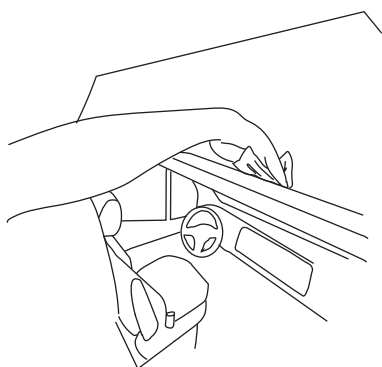

2. Orient your headliner shelf cover to fit the space above your headliner shelf.

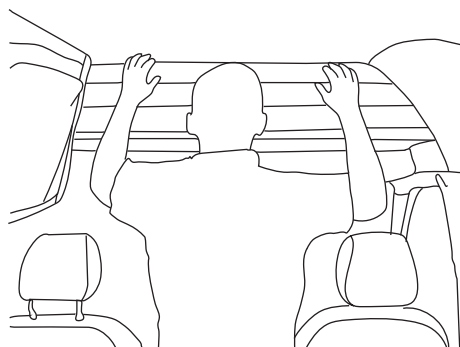


3. Keeping velcro sandwiched together, peel the plastic strip off the bottom seam of the cover. Press the cover to the top of the shelf to adhere.

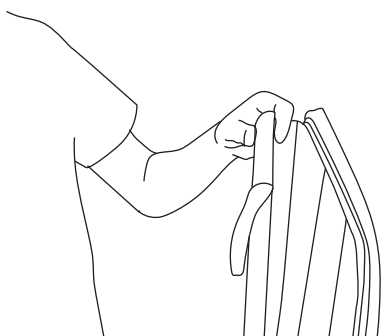

4. Again keeping velcro sandwiched together, peel the plastic strip off of the top of the shelf cover, and press the cover onto the headliner of your van.



5. With your headliner shelf cover in place, unzip the shelf cover and **gently** drill screws through the top of the shelf cover and the headliner for extra security.

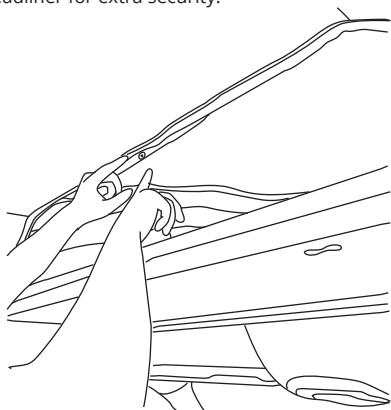

6. Enjoy an organized and tidy vanlife with your headliner shelf cover!

