



# MERCEDES SPRINTER

## HEADLINER SHELF

### What's Included:



Headliner Shelf




Curtain Rail



2x 90 Degree Curtain Rail Brackets



2x Small Mounting Brackets



2x Large Mounting Brackets



Nuts, Bolts, & Washers

### You Will Need:



Hex Key Set




T20 and T30 Sockets or Wrench




10mm Socket or Wrench

1. Bolt the two small, 90 degree curtain rail brackets to either side of the headliner shelf, with the L-shape facing in. Install the curtain rod between the two L-bolts, using the included M6 15mm bolts, washer and **Nylon nuts**.

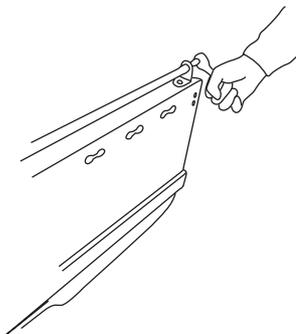


2. Gently pull to remove plastic the coat hooks on either side of your van. Use a T20 torx head to remove the bolt under each hook.

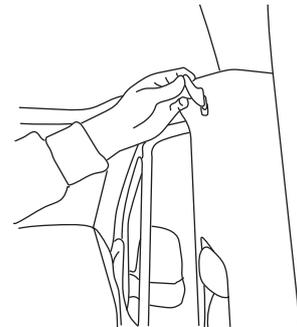


# MERCEDES SPRINTER HEADLINER SHELF


3. Locate the long mounting brackets. Install the drivers side bracket by sliding it behind the factory plastic trim. Aligning the factory screw to the top mounting hole, reinstall the T20 bolt to secure the bracket. Repeat on the **passenger side**.

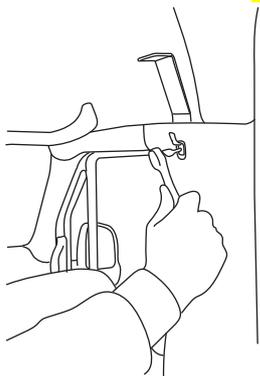

4. Next, remove the plastic cap on your van's grab handles and remove the revealed bolts. Remove this bolt with a T30 Torx tool.

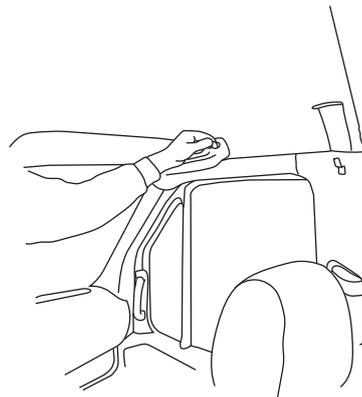


5. Slide the smaller bracket behind the factory plastic trim, then secure by reinstalling the factory bolt. Repeat on the other **side**.

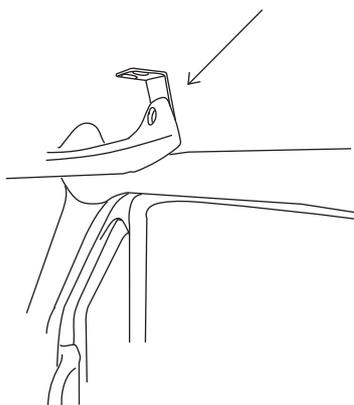

6. Slide your headliner shelf into place with the felt lined side up, and rest on top of the brackets.

**Pro Tip:** if you have cabinets or other items in the way preventing you being able to slide the shelf in, leave the bolts loose on the large rear brackets so it can slide in easier.

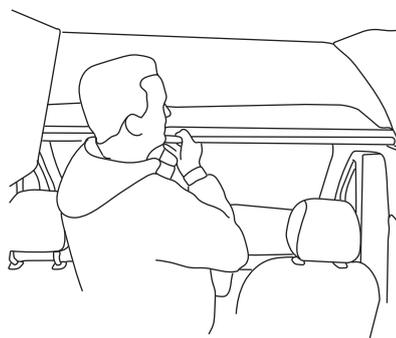

7. Secure the front brackets using two M6 30mm bolts each. Place the bolt from the bottom side of the shelf, and place a washer then a nut on the top side of the shelf. Tighten to secure. Repeat on the rear brackets using M6 15mm bolts.

