
RAM PROMASTER
CURTAIN RAIL


What's Included:



Curtain Rail and Mounting Rail



M6 Bolts, Locking Nuts, & Washers

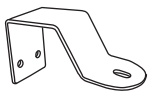


3x Mounting Brackets (2 Small, 1 Large)

You Will Need:




10mm Wrench or Spanner

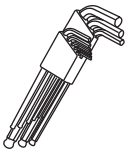


4mm Hex Key


1. Take the two curtain rail pieces and screw together by hand.

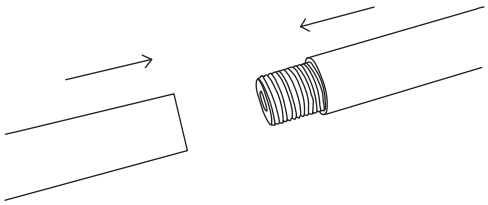


2. Assemble the mounting rail by connecting the male and female ends.

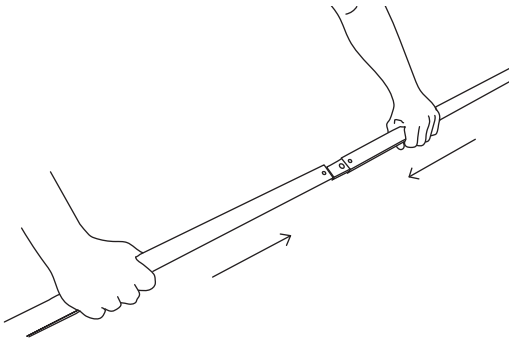


3. Starting in the middle, hold the large mounting bracket to the backside of the mounting rail, and run two long M6 bolts through the rail from front to back. Next, apply a washer to each bolt, then add & tighten the locking nuts using your wrench / socket & hex key.

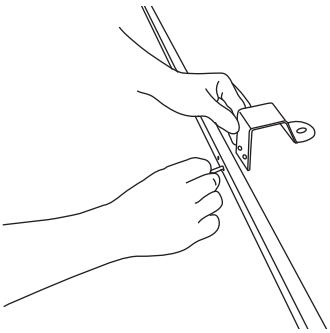


4. Repeat Step 3 with the smaller mounting brackets on the outer ends of the mounting rail.

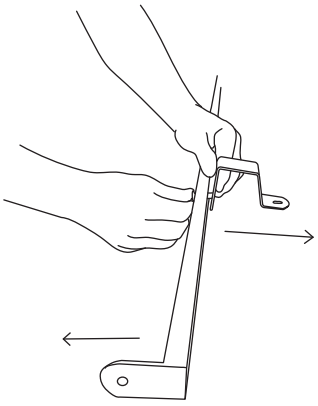

5. Locate the factory nylon nuts on the top of your headliner shelf and remove.

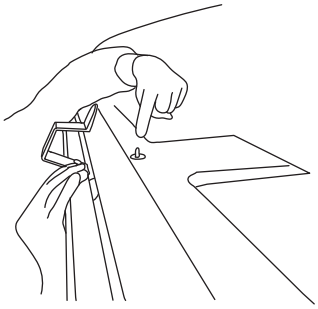


6. Hang the mounting bracket over the lip of the headliner shelf. Align the holes in the mounting brackets with the existing bolts in your headliner shelf.

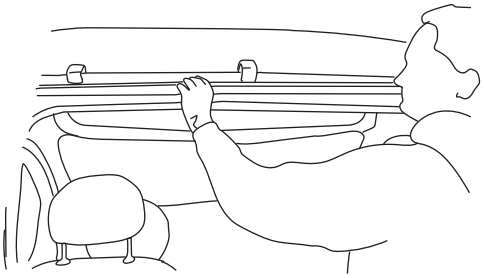

VanEssential

RAM PROMASTER CURTAIN RAIL

7. Once seated flat, secure the mounting brackets to the headliner shelf using the new nylon nuts provided. As you tighten with your wrench / socket, a new thread will cut into the nut.

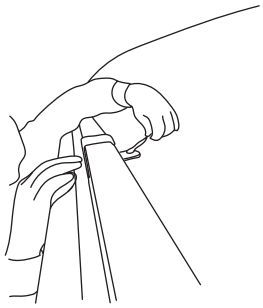

8. Finally, install the curtain rail onto the mounting rail using the short M6 bolts, and tighten with your hex key.

