


VANESSENTIAL


ROAD TRIP CARGO NET

Adjustable Straps:

1. Using adjustable straps, clip the cargo net to I-track rings or any secure points in your vehicle.

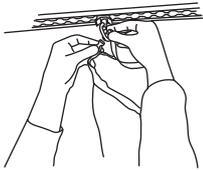


2. Cinch the straps until tight. Use all straps for maximum stability.

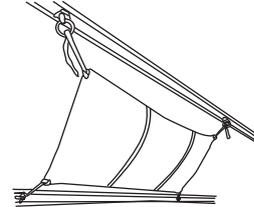


Bolts:

1. Remove adjustable straps from the cargo net.

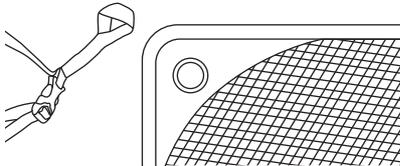

2. Feed M8 bolts through the grommets and secure with a nut. Use all grommets for maximum stability. (Bolts and nuts sold separately).

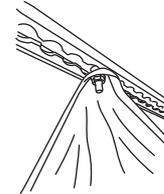

Notes:

- Max weight (20 lbs for small net; 25 lbs for medium & large nets)
- Cargo Nets can be hung in a horizontal or a vertical orientation to best fit your gear needs.

VanEssential