



FORD TRANSIT

HEADLINER SHELF


What's Included:

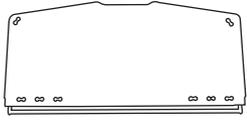


Headliner Shelf




Curtain Rail




2x 90 Degree Curtain Rail Brackets

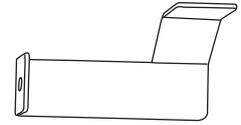


2x Large Mounting Brackets (A)

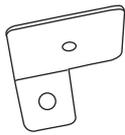

2x Medium Mounting Brackets (B)

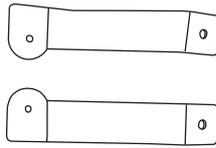


2x Long Skinny Mounting Brackets (C)

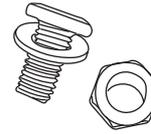

Nuts, Bolts, & Washers


You Will Need:



Phillips head screwdriver




10mm and 14mm Wrench and Sockets

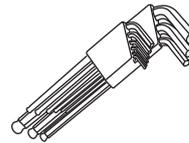


Hex Key Set

1. Bolt the 90 degree curtain rail brackets to either side of the headliner shelf, with the **L-shape facing in**. Mount the curtain rail using the included M6 15 mm bolts, with **washers and nuts**.

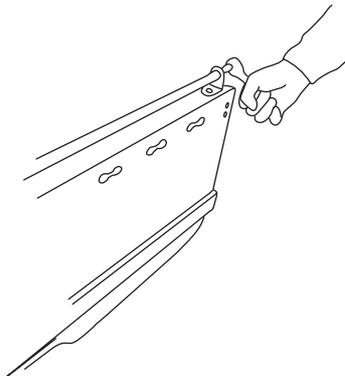


2. Identify the large foam block trim piece located above and to the side of the driver's seat. Using a screwdriver or pry tool, pry up on the plastic clip to remove the foam piece. Don't worry if the plastic clip breaks, as new ones are included for reinstall.

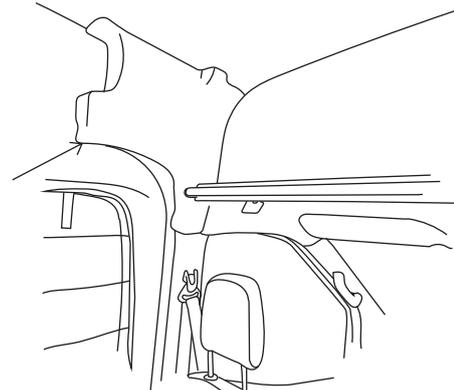


FORD TRANSIT HEADLINER SHELF


3. Insert large mounting bracket (A) where the foam block was and secure with a $\frac{1}{4}$ - 20 bolt. Brackets will face forward as shown in picture. Repeat on the other side.

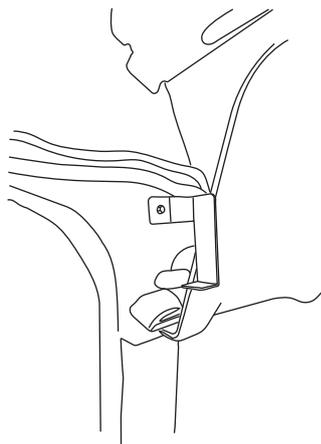


4. Remove and discard the small rectangular plastic piece located in the headliner above your front door. Insert medium sized mounting bracket (B) so that the winglet faces towards the rear of the van. Secure with an M5 45mm bolt. Do not over tighten. Repeat on the other side.

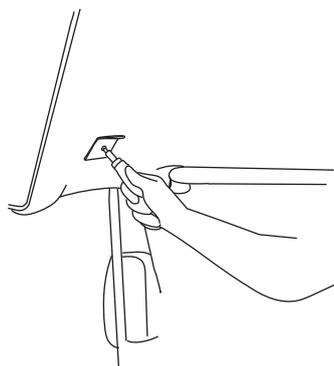


5. Remove and discard the circular plastic plug located at the front of the headliner at the base of your sun visor. Insert the long skinny mounting bracket (C) and secure with a #10 60mm screw. Do not over tighten. Repeat on the other side.

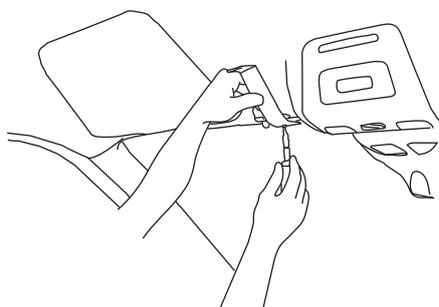

6. Slide the shelf into place, with the felt-lined side up.

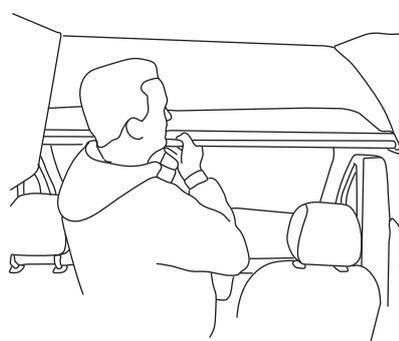

7. Secure the shelf to the brackets using the included M8 15mm bolts. Place the bolt from the bottom side of the shelf, and place a washer then a nut on the top side of the shelf. Tighten to secure.

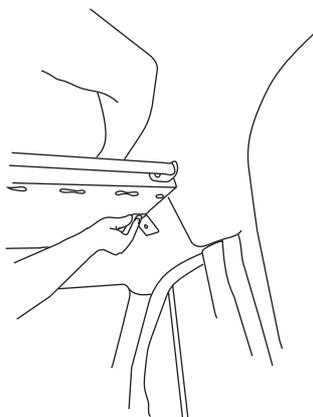

8. Replace the foam pieces on the drivers and passengers side and use a plastic push clip to lock the foam piece into place.

