



# FORD TRANSIT

## HEADLINER SHELF WITH GRAB HANDLES

### What's Included:

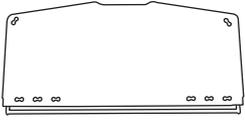


Headliner Shelf



Curtain Rail



2x 90 Degree Curtain Rail Brackets

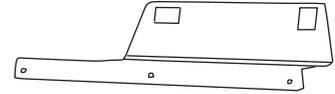

2x Large Mounting Brackets



2x Large 90 Degree Shelf Stiffeners




Nuts, Bolts, & Washers

### You Will Need:





10mm Spanner or Socket

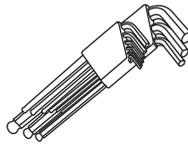


Hex Key Set

1. Before starting install, check your van to see if it includes the middle upright plastic piece above the center of the factory overhead console. If so, remove this plastic fin.
2. Secure the two 90 degree curtain rail L-brackets to either side of the headliner shelf, with a 15mm bolt, washer and nut. Ensure the L-shape faces inward. Install the curtain rod between the two L-brackets, using an M6 15mm bolt.

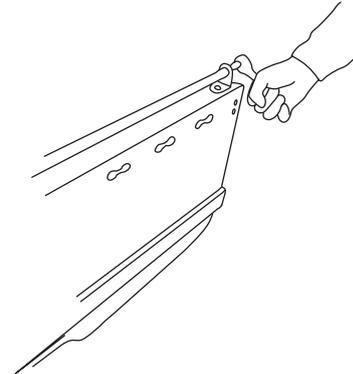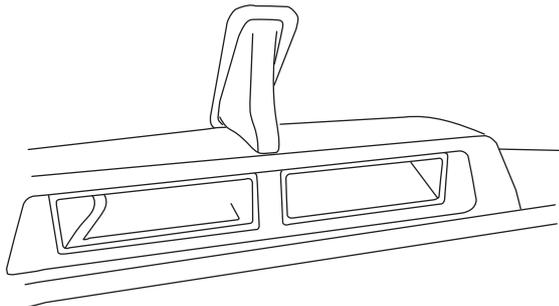


# FORD TRANSIT HEADLINER SHELF


- 3.** Remove the bolts from the factory plastic grab handles on the passenger side and drivers side (4 bolts total).

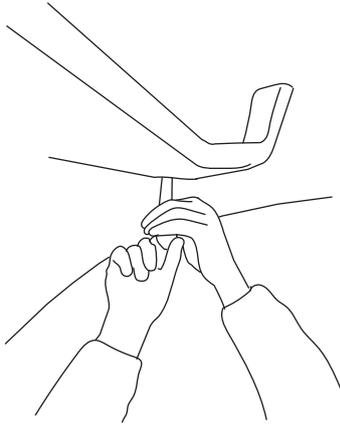


- 4.** Slide your mounting bracket into place, so that the mounting holes in the bracket align with the holes from the now removed bolts.

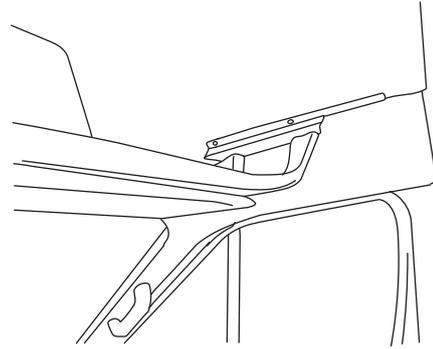

- 5.** Reinstall the factory bolts, with the shorter bolt occupying the hole towards the front of the van.

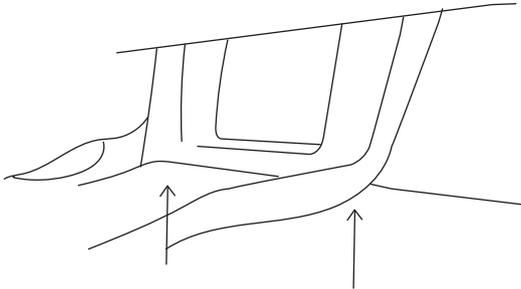

- 6.** Slide the shelf into place, with the felt-lined side up.

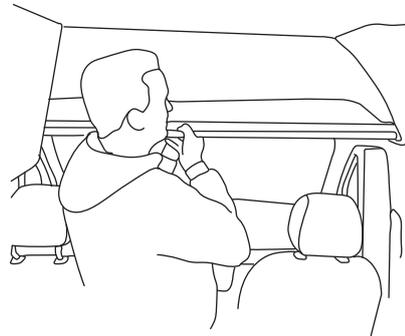

- 7.** Using the 90 degree bracket, install the M6 bolts through all items (both brackets and shelf) and tighten with bolts.

